

Firmware Upgrade Guide

1. Tips:

If the firmware package has a **BIN file** , there is no need for an Update folder. Simply put the firmware into the root directory of the USB drive and update the firmware on the firmware viewing interface.

The following is the update tutorial for **.swu firmware file** .

To upgrade via USB, you must create a folder named "update" in the root directory of the USB drive, and then put the **.swu firmware file** into the update folder.

 update	2025/4/2 18:30	文件夹	
 update.swu	2025/4/2 18:28	SWU 文件	133,984 KB

2.USB Upgrade:

1.Download Firmware Package:

After downloading the compressed package for the corresponding firmware, unzip the "update" folder to the computer desktop. Then, copy it to the USB flash drive, or directly extract it into the USB flash drive. Ensure that the folder is named "update."

2.Upgrade Firmware:

For your convenience, please note that some images in the following guide may show all options, which may differ slightly from your device's actual interface. Please follow the prompts accordingly.

Plug in the power cord and turn on the device. Insert the USB drive into one of the USB ports ,



3.Version Confirmation:

Go to "Settings," "More Settings," "About Machine," and Click the arrow to update the firmware.





Printer Information



Device model

Anycubic Kobra X

Firmware version

V1.1.5.3  >

Print size

260*260*260 mm

WLAN MAC

bc:ad:ae:d7:8b:1f